

Point of Sale

Operating Manual

Features:

300 items can be feed. (10 /16 items are selectable direct.)

2 days sale report can be generated.

Latest 150 slip can be reprint according to serial number.

You can show total amount and number of items of current weighing..

Queue system to hold one person.

Firm name and address on slip.

Item can be select by weight or by number of piece.

Report can be print date wise and serial number wise.

Daily sale report can be print of current day and previous day.

32 column 2" wide thermal paper printer.

Extra Features:








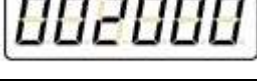
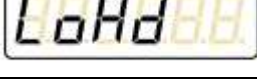
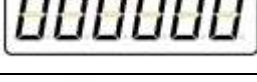

Long press key 7 shows date and time.

Long press key 8 shows total amount and number of items of current slip.

Long press key 9 shows current serial number.



Long press key 0 to switch the queue to another queue. OK

Installation setting (Password 1000):




Display	Numbers will be entered by numeric keys 1 to 10.
	Continuous press any key and switch on the machine until display shows C mode. And enter password 1000 by numeric keys 1 to 10.
	Press mode button and enter maximum capacity. Press mode to enter.
	Put maximum capacity. 020000 for 20kg, 030000 for 30 kg. Press mode to enter.
	Enter resolution i.e. friction weight. 1,2,5,10,20 & 50. Press mode to enter.
	Auto zero for air locking. Press mode to enter.
	Decimal point. 1 for 0.0, 2 for 0.00, 3 for 0.000. Press mode to enter.
	Unload. Unload the platform. Press mode to enter.
	Enter weight for calibration Press mode to enter.
	Load. Put above mentioned weight on platform. Press mode to enter.
	Display will show internal count. Press mode to enter.
	Put location Press mode to enter to normal the machine.

OK


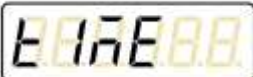



Check internal counts (password 2000):

	Continuous press any key and switch on the machine until display shows C mode. And enter password 2000. Press mode to enter.
	This will show internal counts of the scale.

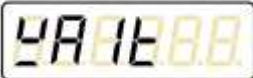








Installation setting (Password 4000): Reset serial number.

	Continuous press any key and switch on the machine until display shows C mode. And enter password 4000 by numeric keys 1 to 10.
	Press mode to enter.
	Press mode to enter. This will reset serial number. Starts from Sr. no. 1.

Installation setting (Password 5000): Setting of time in clock.

	Continuous press any key and switch on the machine until display shows C mode. And enter password 5000. Press mode to enter.
	Press mode to enter.
	Enter time (HHMMSS) Press mode to enter.
	Press mode to proceed.
	Enter date (DDMMYY) Press mode to enter.

Installation setting (Password 8000): Set firm name and address.








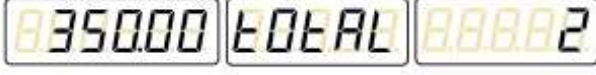




	Store first line for firm name 24 character (6x4) and Second line for address 24 character (6x4). Use alpha bats on number keys. – used for space.
	Continuous press any key and switch on the machine until display shows C mode. And enter password 8000 by numeric keys 1 to 10.
	Press mode to enter.
	Write firm name 6 digit x 4 part, '-' use for space. Press mode to enter.
	Press mode to enter.
	Press mode to enter.
	After 4 steps continue for address feeding.
	Press mode to enter.
	Write address 6 digit x 4 part, '-' use for space. Press mode to enter.
	Press mode to enter.
	Press mode to enter. After 4 steps continue to normal.

OK

Operator setting (Password 9000.): To enter PLU (Names of items).

	<p>Continuous press any key and switch on the machine until display shows C mode. And enter password 9000.</p>
	<p>Press mode. Enter desire PLU no. Press mode</p>
	<p>Write name of item by a to z in numerical keys Shift curser by M1 and M2.</p>
	<p>- used for space. Press mode</p>
	<p>Enter price 500 mean Rupees 5.00. Press mode to proceed.</p>
	<p>Item is selected in weight by default. Put 1 to select by piece. Press mode to proceed.</p>
	<p>For more entries press mode. If not then exit by pressing clear.</p>
	<p>Write name of item by a to z in numerical keys Shift curser by M1 and M2.</p>
	<p>' ' used for space. Press mode</p>
	<p>Enter price 500 mean Rupees 5.00. Press mode to proceed.</p>
	<p>Item is selected in weight by default. Put 1 to select by piece. Press mode to proceed.</p>
	<p>For more entries press mode and follow upper steps. If not then exit by pressing clear.</p>

General Entry:

	<p>Here are 16 items are direct feeding (1 to 10 are direct press and 11 to 16 are by long press of 1 to 6). And others can be selected after pressing by number following mode button.</p>
	<p>Start the indicator.</p>
	<p>Put item i.e. Banana on platform and enter desire PLU no. after pressing MODE. Name of item will show for a moment.</p>
	<p>Display will show weight, rate & amount. Enter by M1.</p>
	<p>Display will show total amount and no. of item.</p>
	<p>Put item i.e. Apple on platform and enter desire PLU no. Name of item will show for a moment.</p>
	<p>Display will show weight, rate & amount. (If you want to change item, press mode again for new location.)</p>
	<p>Enter by M1. Display will show total amount and no. of item.</p>
	<p>Enter PLU no. like candy. Because this item is piece basis.</p>
	<p>Select pieces. And enter by pressing M1.</p>
	<p>And enter by pressing M1.</p>
	<p>You can make up to 12 entries as above. To make final and print the slip, press M2.</p>
	<p>During entries press clear to check the list of weighing. During checking any unwanted entry can be deleted by pressing mode.</p>
	<p>Long press of 7 will show date and time. Long press of 8 will show total amount and no. of item. Long press of 9 will show the current serial number.</p>
	<p>During entries long press of 0 is to hold current person in queue.</p>

Operator setting report (password 9200)

	Continuous press any key and switch on the machine until display shows C mode. And enter password 9200. Press mode & Select 1 to 5.
	Select 1 & press mode.
	Enter start serial no. Press mode.
	Enter end serial no. and press mode to print Sr. no. wise sale report.
	After password select 2 for today sale report. Press mode to Print item wise today day sale report.
	After password select 3 for previous day sale report. Press mode to Print item wise previous day sale report.
	After password select 4 & press mode. Enter the date & print report of selected date.
	After password select 5 & press mode. Print all fed PLUs.

	When you start indicator first time on a day.
	Press mode to print report of previous day. Otherwise press CLR to proceed.
	Press mode to print report of current day. Otherwise press mode to proceed.
	At this time current day's data is transferring to previous day's memory.
	Ready for entries.

--	--

