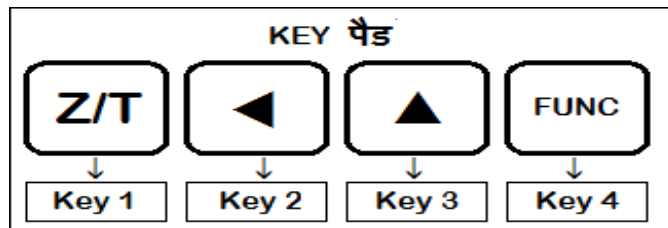


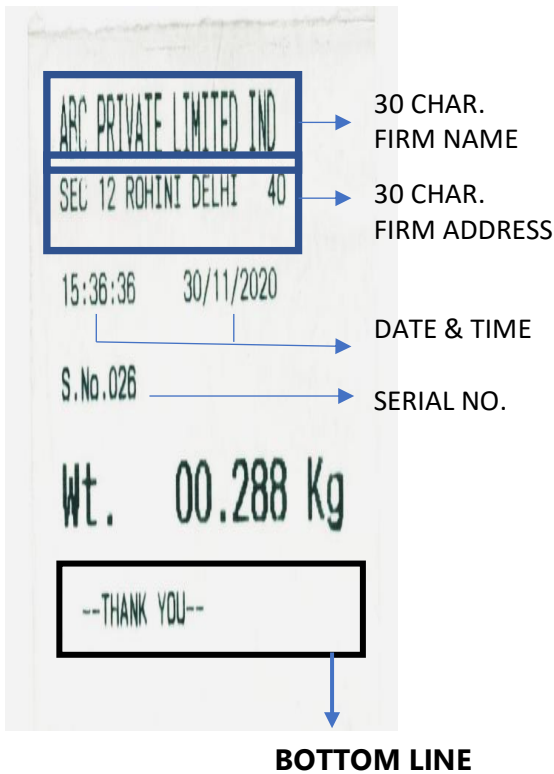
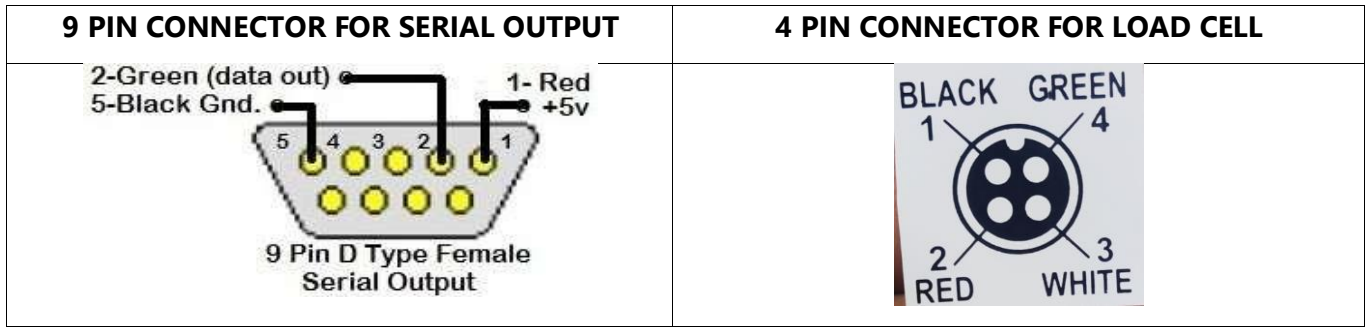
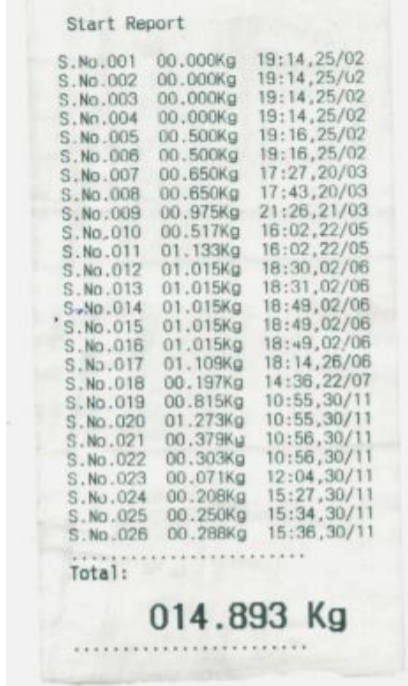
SETTING AND CONNECTIONS PRINTER INDICATOR MANUAL

Features:

- Based on SUPER FAST HI TECH ADC TAIWAN MAKE for better stability.
- No need of calibration and no corner adjustment need.
- Batch weighing facility
- Built in RTC for printing time and date on slip.
- Latest 1000 Weighing data storage capacity
- Metallic body with rust proof and powder coated.
- Name (30 characters) and address (30 characters) of party is editable on customer end.
- Option for connecting internal 6 Volt battery.
- Transformer power supply for more reliability (140-280vAC).
- Big 0.8" display segment.
- Can use 3 wire extra display.
- Data transfer possible via USB over computer.
- Easy and user-friendly model.

<p>APPLICATIONS</p> <ul style="list-style-type: none"> • PRIVATE WEIGHBRIDGES • INDUSTRIAL WEIGHBRIDGES • TOLL WAYS • PUBLIC WEIGHBRIDGES • POS SYSTEM FOR FRUITS AND VEGETABLE 		<p>FULL REPORT ON A CLICK</p> <ul style="list-style-type: none"> • LATEST 1000 S.NO. CAN BE RECALLED • FUNCTION TO WIPE UP ALL S.NO. • USED IN BATCH WEIGHING • EASY TO USE
---	--	--



Start Report		
S.No.001	00.000Kg	19:14,25/02
S.No.002	00.000Kg	19:14,25/02
S.No.003	00.000Kg	19:14,25/02
S.No.004	00.000Kg	19:14,25/02
S.No.005	00.500Kg	19:16,25/02
S.No.006	00.500Kg	19:16,25/02
S.No.007	00.650Kg	17:27,20/03
S.No.008	00.650Kg	17:43,20/03
S.No.009	00.975Kg	21:26,21/03
S.No.010	00.517Kg	16:02,22/05
S.No.011	01.133Kg	16:02,22/05
S.No.012	01.015Kg	18:30,02/06
S.No.013	01.015Kg	18:31,02/06
S.No.014	01.015Kg	18:49,02/06
S.No.015	01.015Kg	18:49,02/06
S.No.016	01.015Kg	18:49,02/06
S.No.017	01.109Kg	18:14,26/06
S.No.018	00.197Kg	14:36,22/07
S.No.019	00.815Kg	10:55,30/11
S.No.020	01.273Kg	10:55,30/11
S.No.021	00.379Kg	10:56,30/11
S.No.022	00.303Kg	10:56,30/11
S.No.023	00.071Kg	12:04,30/11
S.No.024	00.208Kg	15:27,30/11
S.No.025	00.250Kg	15:34,30/11
S.No.026	00.288Kg	15:36,30/11
Total:		
014.893 Kg		

CALIBRATION

Switch On The Machine and Wait For 0000.

	All Parameter Set By KEY3 Shift By KEY2 And Enter by KEY1.
0000	After Stability Dot Switch Off Place 1/3 Weight Of Full Capacity And Together Press KEY3 And KEY4 for few seconds.
ENTER.	If Set Password Then Type Password By KEY2 And KEY3 And Press KEY1 To Enter. Otherwise by pressing KEY1 display will be 00000.
0000	Type Load Weight By KEY2 And KEY3 And Press KEY1 To Enter. (Note: If Display Shows ERR Then Check Counts And Load Cell Connection)

Calibration Lock

On Indicator Motherboard, there is Three pin connector writing CAL LOCK. If center pin is shorted with lock side then calibration and parameter will get locked and calibration or parameters can only be changed after removing the short.






DATE/TIME SET	SHOW KG/GRAM	SET FIRM NAME/ADDRESS/ BOTTOM LINE	PRINTING METHOD IN SLIP SETTING	FIELD NAME CHANGE (HEADINGS)	RESET SERIAL NUMBER	RESET MACHINE TO DEFAULT
050	1051	0501	0502	0503	050	0101

FUNTIONS OF PRINTER INDICATOR

1. DATE/TIME SET
2. SHOW KG/GRAM
3. SET FIRM NAME/ADDRESS
4. PRINT METHOD IN SLIP SETTING
5. ENTER PARAMETER
6. FIELD NAME CHANGE
7. RESET SERIAL NUMBER
8. ENTER PRODUCT NAME/PRODUCT CODE/BATCH NO.

1. DATE/TIME SET

Press KEY3 and Switch on the Machine, Display Will Show HELP

Display	All Parameter up By KEY3 Shift By KEY2 And Enter by KEY1.
	Press KEY 1 then by KEY 2 & KEY 3 type master password 050 Press KEY 1 to ENTER
	Press KEY 1 to ENTER
	Set time by pressing KEY 3 & KEY 2. HHMMSS Press KEY 1 to Enter
	Press KEY1 To Enter.
	Set date by pressing KEY 3 & KEY2. (DDMMYY) Press KEY 1 to ENTER. This will close date & time setting

2. SHOW KG/GRAM

Press KEY3 and Switch on the Machine, Display Will Show HELP

Display	All Parameter up By KEY3 Shift By KEY2 And Enter by KEY1.
	Press KEY 1 then by KEY 2 & KEY 3 type master password 1051 Press KEY 1 to ENTER
	Choose option from KEY 3 '1' for print in slip kg (KILLOGRAM) '0' for print in slip Gm (GRAM) Press KEY 1 to ENTER
	Choose option from KEY 3 '0' Change the type of printer installed. (Small) '1' Change the type of printer installed. (Large) Press KEY 1 to ENTER. This will close printer setting

3. SET FIRM NAME/ADDRESS

Press KEY3 and Switch on the Machine, Display Will Show HELP

Display	All Parameter up By KEY3 Shift By KEY2 And Enter by KEY1.
	Press KEY 1 then by KEY 2 & KEY 3 type master password 0501 Press KEY 1 to ENTER
	Press KEY 1 to ENTER
	Type FIRM NAME by KEY 2 & KEY 3, STEP 1= 6 CHARACTERS TO STEP 5 UPTO 30 CHARACTERS Press KEY 1 to ENTER
	Up to step 5 first line 30 character (6+6+6+6+6).
	Press KEY 1 to ENTER
	Type FIRM ADDRESS by KEY 2 & KEY 3. STEP 1= 6 CHARACTERS TO STEP 5 UPTO 30 CHARACTERS Press KEY 1 to ENTER
	Up to step 5, first line 30 character (6+6+6+6+6). This complete firm address setting.
	Press KEY 1 to ENTER




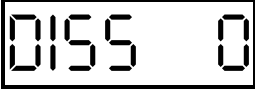
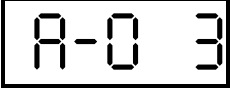





BOTM 5	Type BOTTOM TEXT ON SLIP by KEY 2 & KEY 3. STEP 1= 6 CHARACTERS TO STEP 5 UPTO 30 CHARACTERS Press KEY 1 to ENTER LIKE THANK YOU MESSAGE
.....	Up to step 5, first line 30 character (6+6+6+6+6). This complete bottom line message setting.

4. PRINT METHOD IN SLIP SETTING

Press KEY3 and Switch on the Machine, Display Will Show HELP



Display	All Parameter up By KEY3 Shift by KEY2 And Enter by KEY1.
HELP .	Press KEY 1 then by KEY 2 & KEY 3 type master password 0502 Press KEY 1 to ENTER
NAME 1	"1" to PRINT COMPANY NAME on slip "0" to SKIP COMPANY NAME on slip Press KEY 1 to ENTER
PRDT 0	"1" to PRINT PRODUCT NAME on slip "0" to SKIP PRODUCT NAME on slip Press KEY 1 to ENTER
CODE 0	"1" to PRINT CODE on slip "0" to SKIP CODE on slip Press KEY 1 to ENTER
BTCH 0	"1" to PRINT BATCH NO. on slip "0" to SKIP BATCH NO. on slip Press KEY 1 to ENTER
BTLN 1	"1" to PRINT "BOTTOM LINE" message on slip "0" to SKIP "BOTTOM LINE" message on slip Press KEY 1 to ENTER
TARE 0	"1" to PRINT TARE / GROSS weight on slip "0" to PRINT NET weight on slip Press KEY 1 to ENTER
SAVE 1	"1" to save data in report. "0" to not save data in report. Press KEY 1 to ENTER



5. ENTER PARAMETER

Display	All Parameter up By KEY3 Shift by KEY2 And Enter by KEY1.
	Press KEY2 and switch on the machine. Release the key.
	Keep it '0' for skip print mode, '1' to print one slip, '2' to print two slips together.
	'0' for print slip manually by pressing KEY 4. '1' for print slip automatically when weight is stable. Press KEY 1 to ENTER
	This is sleep mode function. '0' Disable sleep mode. '1' Battery saver in single zero mode on display. '2' Battery saver in scrolling dot mode on display. Press KEY 1 to ENTER
	For zero tracking. Normally set 3. Press KEY1 To Enter
	This is Line Feed Parameter. Higher the value longer will be the slip Press KEY 1 to ENTER
	This is final capacity after which sorry will show on screen. Press KEY1 To Enter.
	Set final capacity. Press KEY1 To Enter.
	This is for decimal point up to final capacity. For 0.000 = '4' and for 0.00 = '3'. Press KEY1 To Enter
	For accuracy up to final capacity. 01=1kg, 02=2kg, 05=5kg or 10=10kg. Press KEY1 To Enter.

6. FIELD NAME CHANGE

Press KEY3 and Switch on the Machine, Display Will Show HELP

Display	All Parameter up By KEY3 Shift By KEY2 And Enter by KEY1.
	Press KEY 1 then by KEY 2 & KEY 3 type master password 0503 Press KEY 1 to ENTER
	Type by KEY 2 & KEY 3 , here if you want to print anything rather than PRODUCT field on slip.










	Type by KEY 2 & KEY 3 , here if you want to print anything rather than P.CODE field on slip.
	Type by KEY 2 & KEY 3 , here if you want to print anything rather than BATCH NO. field on slip.

7. RESET SERIAL NUMBER

Switch on the Machine and long Press KEY4 and, Display Will Show RESET. Enter password '000050' then press key 1 to ENTER.

8. ENTER PRODUCT NAME/PRODUCT CODE/BATCH NO.

Switch on the machine and long Press KEY3.

Display	All Parameter up By KEY3 Shift By KEY2 And Enter by KEY1.
	Product name field. (6+6+6) letters Press KEY 1 to ENTER
	Press KEY 1 to ENTER
	Up to step 3 single line 18 character (6+6+6).
	Product code field. (6+6+6) letters Press KEY 1 to ENTER
	Press KEY 1 to ENTER
	Up to step 3 single line 18 character (6+6+6).
	Batch no. field. (6+6+6) letters Press KEY 1 to ENTER
	Press KEY 1 to ENTER
	Up to step 3 single line 18 character (6+6+6).





Now machine is in normal mode.

STEPS TO PRINT/VIEW REPORTS

1. PRINT REPORT DATE WISE
2. PRINT REPORT SERIAL NUMBER WISE





1. PRINT REPORT DATE WISE

Switch on the machine and long Press KEY2

Display	All Parameter up By KEY3 Shift by KEY2 And Enter by KEY1.
	Enter starting date to print DDMMYY . Press KEY 1 to ENTER
	
	DDMMYY FORMAT . Press KEY 1 to ENTER
	
	Enter ending date to print DDMMYY . Press KEY 1 to ENTER
	
	DDMMYY FORMAT . Press KEY 1 to ENTER
	SLIP WILL PRINT AUTOMATICALLY

2. PRINT REPORT SERIAL NUMBER WISE

Switch on the machine and Press KEY2

Display	All Parameter up By KEY3 Shift by KEY2 And Enter by KEY1.
	Starting SERIAL NO. Press KEY 1 to ENTER
	
	ENTER STARTING SERIAL NO. Press KEY 1 to ENTER
	
	Ending serial no. Press KEY 1 to ENTER
	
	ENTER ENDING SERIAL NO. Press KEY 1 to ENTER
	SLIP WILL PRINT AUTOMATICALLY

TROUBLESHOOTING

Indicator is not operating.	Check main lead and fuse. Check on/off switch.
Weight not showing on display	Check loadcell and load cell connection. Check connectors.
Difference in weight	Recalibrate the machine
Weight running	Check load cell wiring. This can be due to moisture. Place machine in direct sunlight for some time and then start using
Weight not transferred to combi or computer	Check 232 parameter in Enter mode. Check 9 pin connector and its connection. Two led are there behind 9 pin Socket in which one show glow and other should blink. If not so then change 232 IC.

For any other type of complaint please contact your local dealer

Or call on this phone number